



Information BULLETIN

TIPS ON ASH REMOVAL IN THE SECONDARY BURN CHAMBER OF A GASIFICATION BOILER

NOTE: Ash does not have to be removed every day. Before raking the coals or adding wood, open the ash door and check the amount of ash. Remove some ash if required.

Two or 3 inches of ash in the tunnel portion of the firebox is acceptable. Do not scrape it clean.

Only remove the ash; leave the coals.

Remove ash from the apron area in front of the tubes. This area does not have to be scraped clean; an inch of ash can remain.

It may be easier to use a fireplace shovel, or a square shovel, and the ash tool than scraping ash into the ash tray.